


T-Flash Player Headphone



SAFETY PRECAUTIONS: Before using this product, please read and save the enclosed warnings and safety instructions.

■ Button definition

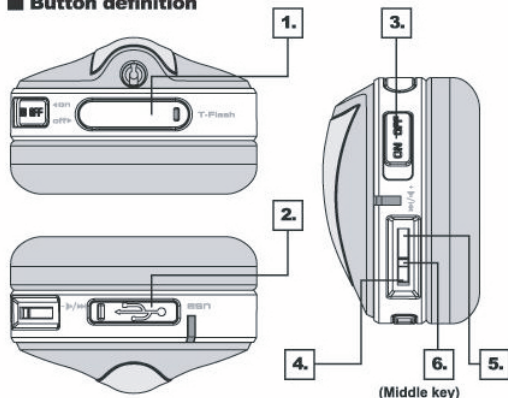

(Middle key)

Package Contant

Flash Music Player 1 USB Cable 1
User Guide 1

Function Overview

- Support Format : MP3/WMA
- Supported Card : T-Flash

■ Operation

- | | |
|--------------------|------------------------|
| 1: T-Flash | 4: Foward / Volume + |
| 2: USB Charge | 5: Backward / Volume - |
| 3: Power(on / off) | 6: Play / Pause |

12

MONTHS

Limited Warranty

enzatec Incorporated hereby warrants to the original consumer purchaser only that this product will be free in normal use of any defects in materials and workmanship for a period of 12 months from consumer's original date of purchase directly from enzatec-authorized reseller. At its sole option, enzatec will repair or replace the defective product and promptly return it to you. In order for this warranty to be valid, the consumer must, at the time the product is returned, provide proof of purchase in the form of the original purchase receipt directly from enzatec-authorized reseller. If enzatec choose to replace the defective product, then enzatec reserves the right to replace the defective product with another product of the same model or a model of at least comparable quality and features in enzatec's sole determination.

This warranty is not transferable. This warrant does not apply in cases of abuse or misuse of the product, use contrary to enzatec instruction, ordinary wear and tear, disaster, negligent use, purchase from a party other than enzatec-authorized reseller, unauthorized repair, or modification of the product. Enzatec also hereby disclaims all liability for incidental, special, or consequential damages.

This Warranty Guide DOESN'T reserves any warranties that associated or included with this product, enzatec has discretion over the claim of warranty.

The content of this manual is subject to change without any prior notification.
For latest information, please kindly visit our website. (<http://www.enzatec.com>)

Before use this product listen to the music, make sure the audio file with the T-Flash card has been inserted within the headphones deck.

How to Play

- 1) USB connection, using this USB connection to charge
- 2) Volume control :
Press up, A short press choose former song, long press (more than 1 second) the volume increase.
Middle key : play / pause
Press down, A short press choose latter song, long press (more than 1 second) the volume decrease.
- 3) Power switch
Turn the power switch to "ON", the indicator light means music player mode. Turn the power switch to "OFF", the lights off.
- 4) T-Flash deck
Indicator light identified: Long bright blue light when standby. Flashing blue light when playing. Long red light when charging. Red light off when fully charging.

Troubleshooting

Low or no volume

- Make sure the audio source is on and the volume is turned up.
- Set LEVEL switch to HI.

Low rumbling sound

- Adjust the fit of the headphones on your ears.
- Make sure no foreign objects are inside the ear cups.
- Make sure portholes are not blocked

Volume too high

- Turn the source volume down.
- Set LEVEL switch to LO.

UŽIVATELSKÁ PŘÍRUČKA - BEZDRÁTOVÁ SLUCHÁTKA SE SLOTEM PRO MICRO SD KARTU

- * USB připojení: Slouží k nabití baterie uvnitř sluchátek. Připojte USB kabel (příložen v balení) přes sluchátka do vstupu PC nebo adaptéru. V průběhu nabíjení bude indikátor svítit červeně. Po ukončení nabíjecího procesu indikátor zhasne.
- * Vložení karty: Do patřičného slotu na sluchátku vložte T-Flash (neboli microSD) kartu s nahranými skladbami.
- * Spuštění: Sluchátka spustíte přepnutím tlačítka do polohy ON (indikátor se rozsvítí). Pro vypnutí sluchátek přepněte tlačítko do polohy OFF.
- * Ovládání :
 - Otočením kolečka nahoru přeskočíte na další skladbu.
 - Otočením kolečka nahoru a přidržením déle než 1 sekundu zvýšíte hlasitost.
 - Otočením kolečka dolů se vrátíte na předchozí skladbu.
 - Otočením kolečka dolů a přidržením déle než 1 sekundu snížíte hlasitost.
 - Stlačení kolečka zastavíte skladbu, popř. spustíte zastavenou skladbu.

UŽIVATELSKÁ PRÍRUČKA - BEZDRÔTOVÉ SLÚCHADLÁ SO SLOMOM PRE MICRO SD KARTU

- * USB pripojenie: Slúži pre nabitie batérie vo vnútri slúchadiel. Pripojte USB kábel (priložený v balení) cez slúchadlá do vstupu PC alebo adaptéra. V priebehu nabíjania bude indikátor svietiť na červeno. Po ukončení nabíjacieho procesu indikátor zhasne.
- * Vloženie karty: Do patričného slotu na slúchadle vložte T-Flash (alebo microSD) kartu s nahratými skladbami.
- * Spustenie: Slúchadlá spustíte prepnutím tlačidla do polohy ON (indikátor sa rozsvieti). Pre vypnutie slúchadiel prepnete tlačidlo do polohy OFF.
- * Ovládanie :
 - Otočením kolieska nahor preskočíte na ďalšiu skladbu.
 - Otočením kolieska nahor a pridržaním dlhšie než 1 sekundu zvýšite hlasitosť.
 - Otočením kolieska dole sa vrátíte na predchádzajúcu skladbu.
 - Otočením kolieska dole a pridržaním dlhšie než 1 sekundu znížite hlasitosť.
 - Stlačením kolieska zastavíte skladbu, popr. spustíte zastavenú skladbu.